

## 2010 Lincoln Navigator L




<b>Driving Condition:</b>	Normal Condition
<b>Drivetrain:</b>	RWD
<b>Cylinders:</b>	8
<b>Fuel:</b>	Gasoline
<b>Transmission:</b>	Automatic
<b>Engine Displacement:</b>	5.4 L

## Recommended maintenance for your vehicle

Mileage	15k	30k	45k	60k	75k	90k	105k	120k	135k	150k
Change Premium Gold engine coolant							X			X
Replace climate controlled seat filters, if equipped		X		X		X		X		X
Replace accessory drive belts (if not replaced within last 100,000 miles)										X
Inspect complete exhaust system and heat shields	X	X	X	X	X	X	X	X	X	X
Inspect PCV for flow (3V and 4V engines)										X
Change automatic transmission/transaxle fluid and filter										X
Replace spark plugs						X				
Inspect and lubricate all non-sealed steering linkage, ball joints, suspension joints, half and drive shafts and u-joints	X	X	X	X	X	X	X	X	X	X
Inspect brake pads/shoes/rotors/drums, brake lines and hoses, and parking brake system	X	X	X	X	X	X	X	X	X	X
Replace fuel filter		X		X		X		X		X
Inspect engine cooling system and hoses	X	X	X	X	X	X	X	X	X	X
Inspect accessory drive belt(s)						X		X		X
Replace engine air filter		X		X		X		X		X



**EVERY  
7,500  
MILES**

-  Perform multi-point inspection
-  Change engine oil and replace oil filter (Up to 5 quarts of oil. Perform at specified mileage interval or every 6 months, whichever occurs first)
-  Rotate and inspect tires; check wheel end play and turning noise