




2011 Lincoln Navigator

Driving Condition:	Normal Condition
Cylinders:	8
Fuel:	Gasoline
Transmission:	Automatic
Engine Displacement:	5.4 L

Recommended maintenance for your vehicle



EVERY
7,500
MILES

-  Change engine oil and replace oil filter
-  Perform multi-point inspection
-  Rotate and inspect tires; check wheel end play and turning noise

Mileage	15K	30K	45K	60K	75K	90K	105K	120K	135K	150K
Inspect brake pads/shoes/rotors/drums, brake lines and hoses, and parking brake system	X	X	X	X	X	X	X	X	X	X
Inspect engine cooling system and hoses	X	X	X	X	X	X	X	X	X	X
Inspect complete exhaust system and heat shields	X	X	X	X	X	X	X	X	X	X
Inspect and lubricate all non-sealed steering linkage, ball joints, suspension joints, half and drive-shafts and u-joints	X	X	X	X	X	X	X	X	X	X
Replace climate controlled seat filters, if equipped		X		X		X		X		X
Replace engine air filter		X		X		X		X		X
Inspect accessory drive belt(s)							X	X		
Replace spark plugs							X			
Change orange engine coolant							X			X
Replace accessory drive belts (if not replaced within last 100,000 miles)										X
Change automatic transmission/transaxle fluid and filter										X